




50 Years of Quality - Made in the UK

Measuring Neat Fit Blinds


Neat fit blinds are suitable to use on all windows that feature a flexible (rubber/foam) gasket seal between the glass and frame. These will typically be aluminium or Upvc framed windows. If in doubt, please call our friendly service team on 0370 218 7042.

To ensure the best possible fit, always measure your window bead to bead. This is from the inner edge of the frame, and not the edge of the seal/gasket

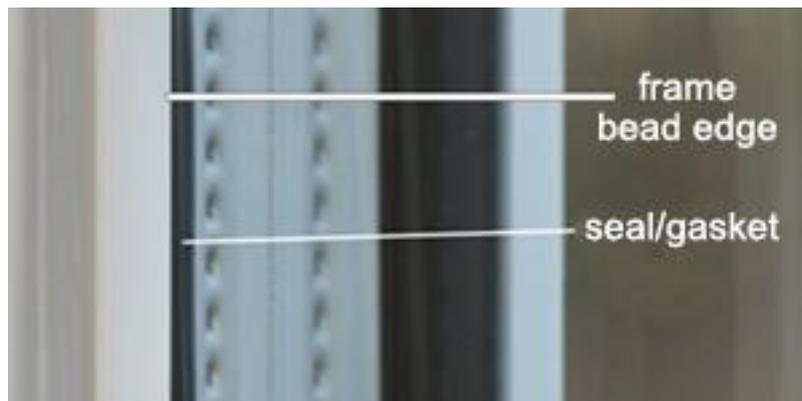

Measuring The Width

Take two measurements of the width, at the top and the bottom of the window, from edge to edge of the inner window frame bead. If there is any variation always use the shortest width to order your blinds. If the windows are particularly large you can take intermediate measurements to check. We deduct 2mm from your ordered width size to ensure a perfect fit.

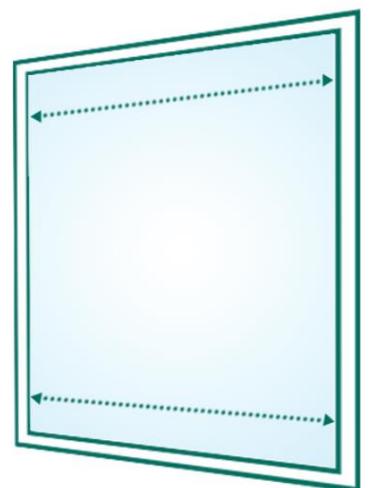


Measuring The Drop

Take three measurements of the window drop. If there are any variations, then always use the **longest** measurement.

Measure from edge to edge of the inner window frame bead.

You must measure accurately and to the nearest millimetre to ensure a good fit.

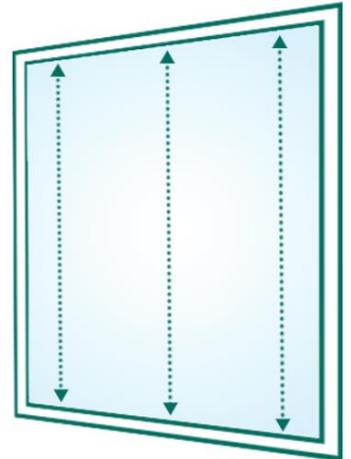

You must measure accurately and to the nearest millimetre to ensure a good fit.

Fitting Neat Fit Blinds

Installation Is Quick And Easy

The end caps on the head and bottom rails simply slide between the glass and rubber gasket. This unique pressure fit design ensures simple installation with no lasting damage to your window frames.

Slot

In the top left window corner, gently but firmly slot the left hand top rail tab in between the left-hand rubber gasket and the glass.

Slide

Gently slide the top rail up the window and ease the right hand top rail tab between the rubber gasket and glass on the right-hand side of the window. Do the same for the bottom rail.



Push

Push the top rail firmly towards the top of the window and bottom rails firmly towards the bottom of the window.



End Caps

Unique end cap design and shim system to allow for fine adjustment at point of installation



Adjusting the tension

Our neat fit blinds come on a pre-tensioned system which features a helpful adjustment metal connector under the bottom rail.

The tension on your blind needs to be sufficient to ensure that the blind doesn't slide down when raised and not over-tensioned, which would result in the blind headrail itself sliding down the window.

A small flat-bladed screw driver is required to adjust. You can increase /decrease tension by using the screw driver to release the cords on the connector and by adjusting the length of the loose end cord prior to re-tightening.



You can cut off any excessive cord but please make sure to keep enough to fine adjust later.

Need Help?

If you would like any further assistance, please call us on 0370 218 7042 Or email shop@swiftdirectblinds.co.uk